

## MULTIMETER – digital, ac/dc 20 amp


Cat: LB2124-001 digital multimeter

### GENERAL DESCRIPTION:

This is a general purpose Digital Multimeter. IEC supplies this meter in the large “Electricity Kit” that teaches electrical theory in both AC and DC. The features include:

- Power ON press button and “Auto Power Off” function to avoid flat batteries.
- Uses standard 9V battery.
- Meter has Volta and Amps ranges for both AC and DC.
- Amps ranges for both AC and DC measure up to 20 amps but also small currents down to 1 microamp can be measured.
- Capacitance ranges up to 20 uF (microfarad)
- Resistance ranges up to 200 megohms ... also diode test and ‘continuity’ with beeper.

LB2124-001 digital multimeter

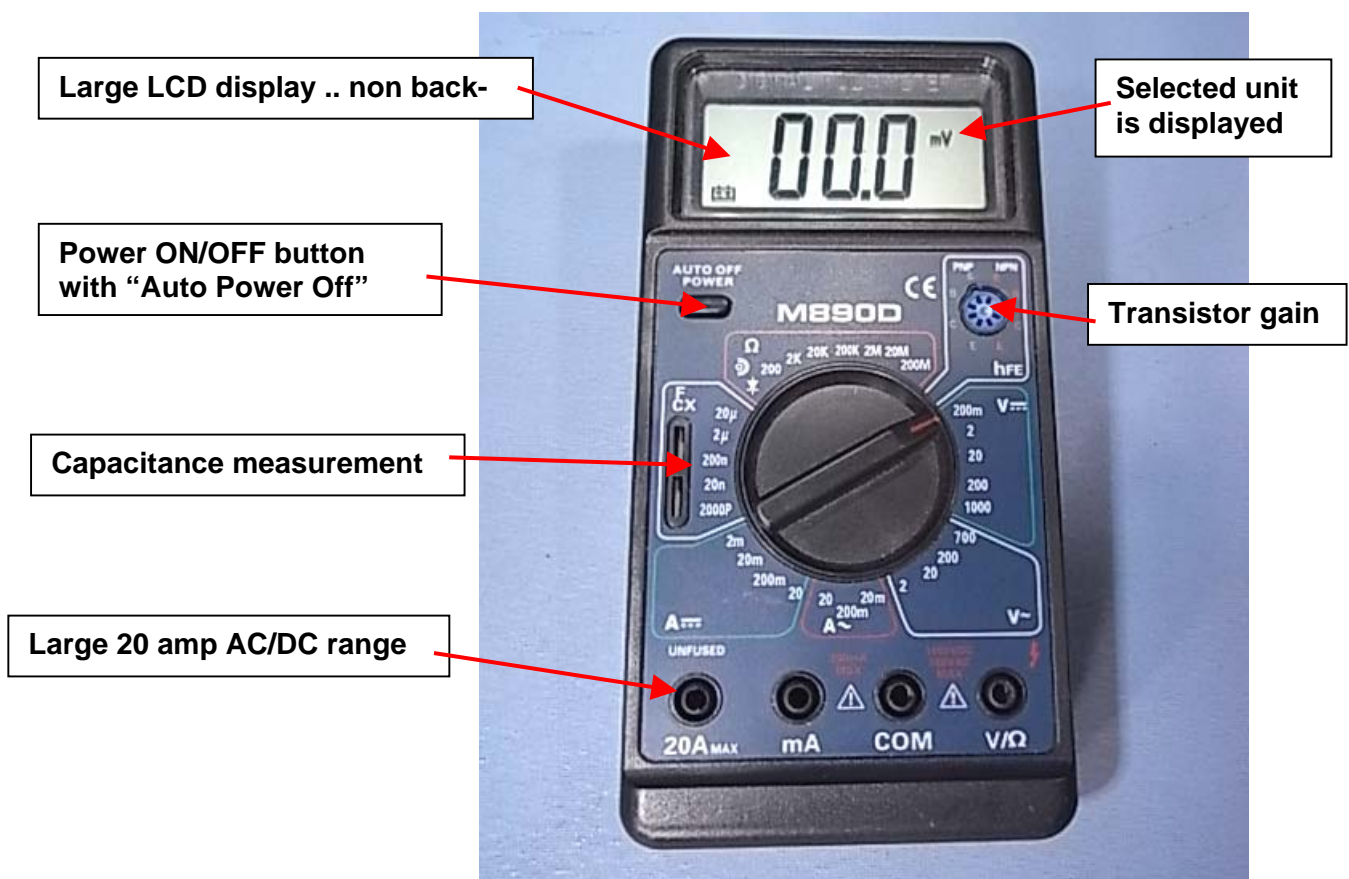

Supplied with pair of red & black cables for connection to loads.

Physical Size: 170 x 85 x 35mm LxWxTh

Weight: 0.12 kg